

# Autotrac Modes and Methods

## Changing Fields and Setting Track 0

Change Farm and Field in drop down menus on right hand side of Home page




## Setting Track 0

There are 3 Guidance Track Options:

1. **Straight Track** - Straight Parallel Lines across entire field generated from A and B points
2. **AB Curve** – Identical curves generated across entire field generated from recorded line
3. **Adaptive Curve** – Continuously records path of machine and generates identical copy of previous pass after you turn on the headland.


*\*To return to manual steering, operator must deactivate system by turning the steering wheel or disabling AutoTrac*

*\*If required, track can be shifted left, right or centered using shift track buttons below.*

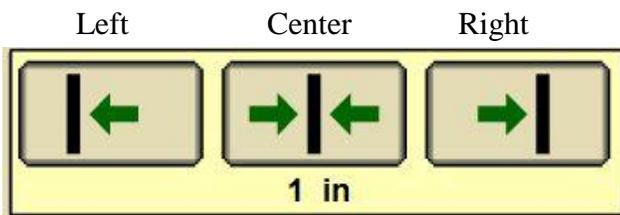

## Straight Track

1. Line up at start of first pass
2. Change Tracking Mode to Straight Track

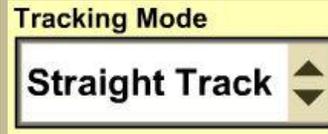


3. Touch Set Track 0



4. Select an existing track from the list or select New and name track, i.e: 1, A,



5. Select the method to create the track

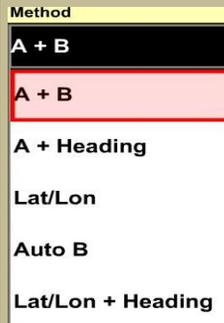

**A+B** – Touch Set A point, Set B Later, Drive towards desired end of first pass and press Set B, Guidance lines will appear

**A+Heading** – Touch Set A and enter heading angle 0-360°, Guidance lines will appear

**Auto B** – Touch Set A, Drive towards desired end of first pass, point B will set automatically after 50 feet and guidance lines will appear

6. Enable AutoTrac



Press Resume Switch or 2 or 3 on the hydro handle to engage AutoTrac

# Autotrac Modes and Methods

## AB Curves

1. Line up at start of first pass
2. Change Tracking Mode to AB Curves

Tracking Mode

AB Curves

3. Touch Set AB Curve

Set AB Curve

4. Select an existing track from the list or select New and name track, i.e: 1, A,



5. Touch Record to turn recording on



6. Drive desired path
7. Use the Pause button to record a straight line between two points



8. Touch Stop at the end of the first pass before you turn around



9. Guidance lines will appear
10. Enable AutoTrac




11. Press Resume Switch or 2 or 3 on the hydro handle to engage AutoTrac

\*To return to manual steering, operator must deactivate system by turning the steering wheel or disabling AutoTrac

\*If required, track can be shifted left, right or centered using shift track feature on display.

Left      Center      Right

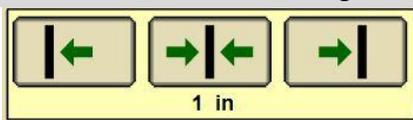

## Adaptive Curve

1. Change Tracking Mode to Adaptive Curves

 
Tracking Mode

Adaptive Curves

2. Touch Recording to turn recording on



3. Drive first pass and make the turn on the end
4. After your turn Enable AutoTrac



5. Press Resume Switch or 2 or 3 on the hydro handle to engage AutoTrac

\*Keep recording on the entire time while working in the field

\*The next guidance line will appear each time the machine turns around

6. Stop recording at the end of the field

\*Only one Adaptive Curve may be recorded per field. When changing fields the field name must be changed prior to recording to avoid connecting the guidance line between fields.

\* Shift Track is not available in Adaptive Curves

